

User Instructions for Oyster, Oyster Duo and Octopus cordless vibrators



**CORDLESS
MASSAGER
Instructions**



Buy Direct from www.buttontoys.com

How to Wear The Oyster

Hook the control unit onto your waistband and position the Oyster in the correct spot between your underwear and your skin. The Oyster should be aligned from front to back with the wire coming out of the front.

How to Wear The Oyster DUO

In addition to the Oyster's pink massager, the DUO also has a teardrop massager to give an extra dimension to your stimulation.

How to Wear The Octopus

The Octopus has a powerful massager in a soft and very flexible band to fit around the penis. Whatever the level of attention demanded, you can be assured that the Octopus always remains comfortable and in place. The commander has an extra silver bullet.

Batteries:

- Always use alkaline batteries. Size. AAA which should be GP Ultra Digital or Duracell Ultra Digital. The key fob battery is Size 23A. Spare batteries are available from us or any reputable battery supplier
- Be careful to fit the batteries around the correct way as shown in the diagram below. Incorrect insertion of batteries may damage your massager and invalidate the warranty
- Ensure that you switch the massager off when not in use. This will conserve the batteries
- Ensure that you slide the locking upwards to lock the belt clip and battery cover into position
- If the massager thinks that you have left the power switched on it will turn on a message head to act as a reminder to switch the power off.

NOTE BOTH BATTERIES ARE FITTED POINTING THE SAME WAY

Training: Note: New toys are already trained.

Your massager will remember your key fob if you teach it well. If you let the batteries run totally flat it may forget the identity of your key-fob and stop responding. All key fobs have a unique code. To teach the massager to obey your key-fob follow these steps:

- Remove the battery cover and fit new batteries. Replace the cover.
- Plug in a message head.
- Leave the unit for 30 minutes without touching the wake-up button. Do not press any buttons on the remote control during this period. Press and HOLD down the wake up button for 25 seconds.
- Release the wake-up button.
- Press the large button (slow speed) on the remote keyfob.
- If the training is successful the message head will activate for 2 seconds and then stop.
- The unit will go into sleep mode after storing the keyfob identity.
- Press the wake-up button to power up the control unit and test operation by pressing the buttons on the remote control.
- In the unlikely event that the unit fails to respond to the keyfob then wait 30 minutes and repeat the entire teach process.
- You can teach it to respond to up to 6 different key fobs.
- You can make your massager forget any associations by pressing and holding the wake-up button for 25 seconds (follow instructions above) release the button for a few seconds and then press and hold the wake-up button for 35 seconds. The unit will go to sleep and store the first key fob code that it receives after it is woken..

Troubleshooting:

Flat Batteries cause the following: (i) No response (ii) the message only operates for a second and then stops (iii) the range is reduced (iv) The LED on the key fob fails to light.

I have changed the batteries and it still won't work:

- The batteries must be new quality alkaline cells. If in doubt replace the batteries.
- The Oyster needs training - follow the training instructions above.
- Press the fast button for the head and tap the head on a hard surface.

Congratulations on the purchase of your Oyster. We at ButtonToys are dedicated to providing quality products that will bring you lots of fun. Please follow these simple instructions to get the most from your ButtonToy. If you follow them you will enjoy many years of reliable service.

Warning: This is an adult novelty toy. Do not wear the toy in any situation where distraction could cause injury to yourself or others.

How to Wear The Oyster & Oyster DUO:

The underwear you choose when wearing your Oyster or Oyster DUO will make all the difference to the experience:

- The Oyster is very comfortable to wear and you will soon forget it is there until a button is pressed.
- Hook the control unit onto your waistband and position the pink message head in the correct spot between your underwear and your skin. The message head should be aligned from front to back with the wire coming out of the front.
- Any type of underwear is suitable but beware loose shorts as they may give the game away!
- Usually, as you become aroused, the Oyster presses the correct spot and causes stronger sensations.

How to Wear The Octopus:

How to Wear:

- The Octopus is very comfortable to wear and you will soon forget it is there until someone presses a button.
- Any type of underwear is suitable but beware loose shorts as they may give the game away!

Operation:

- Switch the unit on. On is when the slide switch is in the down position.
- Encourage your lover not to use speeds above level 2 until you have got used to the sensations. Also encourage small bursts at the higher speeds.
- Note: The message head will operate for approximately 25 seconds and then cut out. It can be restarted by releasing and pressing the control button. This is to prevent the batteries on the key fob running down if they are pressed in your pocket
- Remember to switch the unit off when not in use to prevent disappointment on your next outing,

Caring For Your Massager:

- Do not expose the control unit or remote control key fob to water, temperatures above 40 degrees C or extreme shocks.
- Do not immerse the Message head in water.
- Clean the message head with a damp cloth.
- Remove the batteries from the control unit if the Oyster is not in use for a long period.

Warning: Fitting batteries in the wrong polarity may damage your Oyster and invalidate the warranty.




Oyster & Octopus

1. Slow
2. Medium
3. Fast
4. WOW

Oyster DUO & Octopus Commander

1. Pink Slow
2. Pink Fast
3. Bullet Slow
4. Bullet Fast

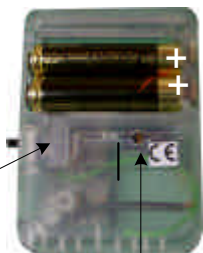

Battery Cover Lock

Teach Switch



